



S-Series and V-Series Thin Client Bracket
Set-up Guide –997-3185-00 and 997-3283-00

www.planar.com

Planar Systems, Inc.

Customer Service

24x7 Online Technical Support: <http://www.planar.com/support>

Tel: 1-866-PLANAR1 (866-752-6271, option #2)

Email: PlanarSupport@planar.com

Hours: M-F, 5am - 5pm Pacific Time

© 2006 **Planar Systems, Inc. 12/06** Planar is a registered trademark of Planar Systems, Inc.

Other brands and names are the property of their respective owners.

Technical information in this document is subject to change without notice.

Document p/n: 020-0505-00B

| Items Included in Box | Items Needed |
|---|--|
| <ol style="list-style-type: none"> 1. S-Series or V-Series Thin Client Bracket – black. <ol style="list-style-type: none"> a. Please note: The side without the vertical ventilation lines lays flush to the back of the monitor. 2. Four 10mm Allen head screws – black – to attach the bracket to the back of the monitor 3. One 18" VGA cable to attach the thin client to the monitor 4. One 18" USB cable to attach the thin client to the USB touchscreen monitor 5. One 3mm Allen wrench to attach bracket to back of monitor. <ol style="list-style-type: none"> a. Please note: hardware to mount the bracket to the cart, swing arm or wall mount is not included. | <ol style="list-style-type: none"> 1. PT1500MU, PT1501MU, PT1700MU, PT1701MU, PT191MU touchscreen LCD monitor. <ol style="list-style-type: none"> a. Please note: May also be used with the serial versions of the PT15 or PT17 LCD monitors but the short RS-232 serial cable will need to be sourced separately as it is not included. b. Please note: The brackets may be used with the LA 15", 17" and 19" open-frame kiosk displays. 2. Wyse® S- or V-Series thin client (sold separately) |

Attachment Process




Figure 1: S-Series Bracket



Figure 2: V-Series Bracket



Figure 3: Fully integrated unit

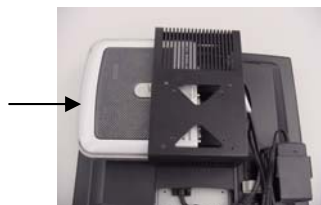

Figures 4 and 5: Slide thin client from left to right until it clicks into place.

1. Remove bracket, screws, and thin client (sold separately) from their packaging materials.
2. Orient the display as seen in Figure 3.
3. Orient the bracket on the back of the monitor as shown in Figures 1 or 2 (depending on model).
4. Line up the holes on the bracket with the holes on the back of the monitor. Using the Allen wrench, secure the bracket to the monitor using the four 10mm Allen head screws.
5. Slide either S-Series or V-Series thin client computer into the rails of the bracket from left to right. See Figures 4 and 5.
 - a. **Please note:** The computer will securely click into place.
6. Insert thin client power adapter into the lower right holster.
7. Attach VGA cable, USB cable and power adapter connector to the thin client and monitor.
 - a. **Please note:** This bracket is also compatible with the RS-232 serial touchscreen LCD monitor versions.
8. Bundle excess power adapter cabling, VGA cable and USB cable and put into cable clip located to the left of the holster.
9. Mount the thin client bracket/monitor bundle to the customer-specified mounting solution.
10. Follow thin client instructions to set up and operate thin client.